

 
 
 
 

 
 




 




 
 

 


 















 





| Original | Replacement | Original | Replacement |
|--|---|--|---|
|  Power |  Power |  Quick Select 2 |  Text |
|  Input TV Audio |  1 |  Quick Select 3 |  Eject |
|  Input Tuner |  2 |  Quick Select 4 |  AV |
|  Input Bluetooth |  3 |  CH + / Page + |  Ch + |
|  Input Phono |  4 |  CH - / Page - |  Ch - |
|  Input USB |  5 |  Eco |  3D |
|  Input HEOS |  6 |  Mute |  Mute |
|  Input Internet Radio |  7 |  Volume + |  Vol + |
|  Input CBL/SAT |  8 |  Volume - |  Vol - |
|  Input DVD |  9 |  Info |  Info |
|  Input Blu-ray |  Guide |  Option |  Options |
|  Input Aux1 |  0 |  Setup |  Menu |
|  Input Game |  Pre Ch |  Back |  Back |
|  Input Aux2 |  Shift + Smart |  Back |  Exit |
|  Input Media |  Media |  Up |  Up |
|  Input CD |  Smart |  Down |  Down |
|  Quick Select 1 |  D. Menu |  Right |  Right |




 
 
 






 

 
 



 
 

 



 




| Original | Replacement | Original | Replacement |
|---|--------------------------|---|----------------|
|  | Left |  | Left |
|  | Enter |  | Ok |
|  | I<< / Tune - |  | I<< |
|  | Play |  | Play |
|  | >>I / Tune + |  | >>I |
|  | << |  | << |
|  | Pause |  | Pause |
|  | Stop |  | Stop |
|  | >> |  | >> |
|  | Green / Sound Mode Movie |  | Green |
|  | Red / Sound Mode Music |  | Red |
|  | Blue / Sound Mode Game |  | Blue |
|  | Yellow / Sound Mode Pure |  | Yellow |
|  | 1 |  | Shift + 1 |
|  | 2 |  | Shift + 2 |
|  | 3 |  | Shift + 3 |
|  | 4 |  | Shift + 4 |
|  | 5 |  | Shift + 5 |
|  | 6 |  | Shift + 6 |
|  | 7 |  | Shift + 7 |
|  | 8 |  | Shift + 8 |
|  | 9 |  | Shift + 9 |
|  | 0 |  | Shift + 0 |
|  | Enter |  | Shift + Pre Ch |
|  | Sleep |  | Sleep |

 

 
 








 


 





 


 







 

 





 






| Original | Replacement | Original | Replacement |
|--|---|--|---|
|  Power |  Power |  Quick Select 2 |  Text |
|  Input TV Audio |  1 |  Quick Select 3 |  Eject |
|  Input Tuner |  2 |  Quick Select 4 |  AV |
|  Input Bluetooth |  3 |  CH + / Page + |  Ch + |
|  Input Phono |  4 |  CH - / Page - |  Ch - |
|  Input USB |  5 |  Mute |  Mute |
|  Input HEOS |  6 |  Volume + |  Vol + |
|  Input Internet Radio |  7 |  Volume - |  Vol - |
|  Input CBL/SAT |  8 |  Up |  Up |
|  Input DVD |  9 |  Down |  Down |
|  Input Blu-ray |  Guide |  Right |  Right |
|  Input Aux1 |  0 |  Left |  Left |
|  Input Game |  Pre Ch |  Enter |  Ok |
|  Input Aux2 |  Shift + Smart |  Back |  Back |
|  Input Media |  Media |  Back |  Exit |
|  Input CD |  Smart |  I<< / Tune - |  I<< |
|  Quick Select 1 |  D. Menu |  Play |  Play |



 

 

 

 
 



 




| | Original | Replacement | Original | Replacement |
|---|--------------|--|----------|-------------|
|  | >>I / Tune + |  >>I | | |
|  | << |  << | | |
|  | Pause |  Pause | | |
|  | Stop |  Stop | | |
|  | >> |  >> | | |
|  | 1 |  SHIFT +  Shift + 1 | | |
|  | 2 |  SHIFT +  Shift + 2 | | |
|  | 3 |  SHIFT +  Shift + 3 | | |
|  | 4 |  SHIFT +  Shift + 4 | | |
|  | 5 |  SHIFT +  Shift + 5 | | |
|  | 6 |  SHIFT +  Shift + 6 | | |
|  | 7 |  SHIFT +  Shift + 7 | | |
|  | 8 |  SHIFT +  Shift + 8 | | |
|  | 9 |  SHIFT +  Shift + 9 | | |
|  | 0 |  SHIFT +  Shift + 0 | | |
|  | Enter |  SHIFT +  Shift + Pre Ch | | |
|  | Sleep |  PROG SLEEP Sleep | | |

 
 



 







 

 


 






 


 







 



 






| Original | | Replacement | | Original | | Replacement | |
|---|----------------------|---|----------------|---|---------------|---|---------------|
|  | Quick Select 1 |  | D. Menu |  | Input Game |  | Pre Ch |
|  | Enter |  +  | Shift + Pre Ch |  | Input Aux2 |  +  | Shift + Smart |
|  | Quick Select 4 |  | AV |  | Input Media |  | Media |
|  | Quick Select 3 |  | Eject |  | Input CD |  | Smart |
|  | Quick Select 2 |  | Text |  | CH + / Page + |  | Ch + |
|  | Power |  | Power |  | CH - / Page - |  | Ch - |
|  | Input TV Audio |  | 1 |  | Mute |  | Mute |
|  | Input Tuner |  | 2 |  | Volume + |  | Vol + |
|  | Input Bluetooth |  | 3 |  | Volume - |  | Vol - |
|  | Input Phono |  | 4 |  | Up |  | Up |
|  | Input USB |  | 5 |  | Down |  | Down |
|  | Input HEOS |  | 6 |  | Right |  | Right |
|  | Input Internet Radio |  | 7 |  | Back |  | Exit |
|  | Input CBL/SAT |  | 8 |  | Left |  | Left |
|  | Input DVD |  | 9 |  | Enter |  | Ok |
|  | Input Blu-ray |  | Guide |  | Back |  | Back |
|  | Input Aux1 |  | 0 |  | I<< / Tune - |  | I<< |





| | Original | Replacement | Original | Replacement |
|---|--------------|---|----------|-------------|
|  | Play |  Play | | |
|  | >>I / Tune + |  >>I | | |
|  | << |  << | | |
|  | Pause |  Pause | | |
|  | 1 |  +  Shift + 1 | | |
|  | 2 |  +  Shift + 2 | | |
|  | 3 |  +  Shift + 3 | | |
|  | 4 |  +  Shift + 4 | | |
|  | 5 |  +  Shift + 5 | | |
|  | 6 |  +  Shift + 6 | | |
|  | 7 |  +  Shift + 7 | | |
|  | 8 |  +  Shift + 8 | | |
|  | 9 |  +  Shift + 9 | | |
|  | 0 |  +  Shift + 0 | | |
|  | Stop |  Stop | | |
|  | >> |  >> | | |
|  | Sleep |  Sleep | | |

