






 



 









 

 

 











 



 

 






 
 

 

 

 

 















	Original	Replacement		Original	Replacement
	 Power	 Power		 Stop	 Stop
	 Mute	 Mute		 Return	 Back
	 Tv/AV	 AV		 Display	 Info
	 1	 1		 Vol+	 Vol +
	 2	 2		 Vol-	 Vol -
	 3	 3		 Sys Menu	 Menu
	 4	 4		 Sys Exit	 Exit
	 5	 5		 CH+	 Ch +
	 6	 6		 CH-	 Ch -
	 7	 7		 Up	 Up
	 8	 8		 Down	 Down
	 9	 9		 Right	 Right
	 0	 0		 Left	 Left
	 -/--	 -/--		 Enter	 Ok
	 -/--	 -/--		 Picture	 Format
	 Open / Close	 Eject		 Sound	 Dual
	 Play	 Play		 Timer	 Shift +  AV
	 Pause	 Pause			



