




 






Original		Replacement		Original		Replacement	
	Power		Power				I<<<
	Open / Close		Exit				>>>I
	1		1				<<<
	2		2				>>>
	3		3		Repeat		Shift + Text
	4		4		▶ /		Play
	5		5		▶ /		Pause
	6		6		■		Stop
	7		7		Mute		Mute
	8		8		Source		AV
	9		9		TV / AV / DVD		Shift + AV
	0		0		Prog+		Ch +
	-/- / 10+		Guide		Prog-		Ch -
	Q.View		Smart		Vol+		Vol +
	P.P		Pre Ch		Vol-		Vol -
	[+]		Info		Menu		Menu
	Swap		Back		Sys.		Media





Original		Replacement	
	Reveal		Green
	Slow / Text		Text
	Size		3D
	Mix		TV/R
	Title		List
	Angle / Index		Format
	Stop	 + 	Shift + Stop
	Zoom /		Eject
	DVD Menu		D. Menu
	Program		Sleep
	Subtitle		Subt
	Audio		Dual
	Goto		Red
	(j)		Blue
	DVD Setup		Options
	Display	 + 	Shift + Info
	Up		Up

Original		Replacement	
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down

