



Original	Replacement	Original	Replacement
 Power	 Power	 8	 8
 Open / Close	 Eject	 9	 9
 TV / DTV	 TV/R	 +/-	 Shift + Guide
 Line	 AV	 0	 0
 DVD	 Media	 PRE	 Pre Ch
 TTX	 Text	 Vol +	 Vol +
 PIP ON / OFF	 Shift + Power	 Vol -	 Vol -
 PIP Swap	 Shift + Back	 Prog +	 Ch +
 PIP Source	 Shift + AV	 Prog -	 Ch -
 PIP Sound	 Shift + Dual	 M/S	 Subt
 1	 1	 Still	 Shift + Pause
 2	 2	 Sleep	 Sleep
 3	 3	 TV Menu	 Menu
 4	 4	 P.STD	 Format
 5	 5	 S.STD	 Shift + Subt
 6	 6	 P.Size	 Shift + Format
 7	 7	 Exit / Cancel	 Exit





Original	Replacement
	 Up
	 Right
	 Down
	 Left
	 Ok
	 Mute
	 Shift + Info
	 Stop
	 Play
	 Pause
	 <<<
	 >>>
	 I<<<
	 >>>I
	 Red
	 Green
	 Yellow

Original	Replacement
	 Blue
	 Shift + Text
	 Shift + TV/R
	 Dual
	 3D
	 Back
	 Shift + Menu
	 List
	 Options
	 Guide
	 Shift + Exit
	 Info

