



 







 



 

 

 
 





 
 


 








 

 

 

 

 
 
 
 

 




 

 

 

 

 




Original		Replacement		Original		Replacement	
	Power		Power		P+		Ch +
	Source		AV		P-		Ch -
	1		1		i		Info
	2		2		Menu		Menu
	3		3		Q.Menu		D. Menu
	4		4		Back		Back
	5		5		Exit		Exit
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0		0		OK		Ok
	Tv		TV/R		World		Media
	Recall		Pre Ch		Music-Photo-Vide		Options
	Vol+		Vol +		Guide		Guide
	Vol-		Vol -		*/o		Format
	Mute		Mute		*/Q		3D





Original		Replacement		Original		Replacement	
	Text		Text				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Lang.		Dual				
	[≡]..		Subt				
	[-o-]		Smart				
	<<		<<				
	Pause		Pause				
	>>		>>				
	Rec		Rec				
	Play		Play				
	Stop		Stop				

