
 
 




 
 

 



 




 


 




 





Original		Replacement		Original		Replacement	
	Power		Power		Info		Info
	Mute		Mute		Exit		Exit
	Pause		Pause		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		OK		Ok
	5		5		Page+		Ch +
	6		6		Page-		Ch -
	7		7		Vol+		Vol +
	8		8		Vol-		Vol -
	9		9		FAV		Pre Ch
	0		0		Red		Red
	Recall		Back		Green		Green
	Scan		Smart		Yellow		Yellow
	Menu		Menu		Blue		Blue
	MP		Media		SAT		Options





Original		Replacement		Original		Replacement	
	Audio		Dual				
	Tv/Radio		TV/R				

