




 

 



 











 

 

 

 



 

 


 


 
 










 

 
 
 
 

 
 

 








Original	Replacement	Original	Replacement
	Power		Power
	Source		AV
	TV		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Text		Text
	Info		Info
	Menu		Menu
	Picture		Format
	Sound		Dual
	PRG +		Ch +
	PRG -		Ch -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Vol +		Vol +
	Vol -		Vol -
	CTRL		Media
	Mute		Mute
	Exit		Exit
	Size / Audio		Shift + Dual
	Still / Subt		Subt
	PIP / REP		Options
	Focus / A-B		Eject
	Normal / Title		Ok





Original	Replacement	Original	Replacement
CVBS1	+ Shift + 1		
CVBS2	+ Shift + 2		
CVBS3	+ Shift + 3		
Y Pb Pr	+ Shift + 4		
YC1	+ Shift + 5		
YC2	+ Shift + 6		
PC	PRE-CH Pre Ch		
HDMI	Smart		
[≡?] / MTS	List		
[≡] / Sleep	Sleep		
[≡i] / Time	3D		
[≡] / PREPG	Guide		
Red / Delete	Red		
Green / Skip	Green		
Yellow / Insert	Yellow		
Blue / Replace	Blue		

