 





































 














Original	Replacement	Original	Replacement
 Standby	 Power	 CH+	 CH+ / Page+
 Mute	 Mute / Dimmer	 Vol-	 Vol-
 1	 1	 Zoom/Aspect	 Shift + Zoom /
 2	 2	 Zoom/Aspect	 Picture / Format
 3	 3	 CH-	 CH- / Page-
 4	 4	 Menu	 Menu / Home
 5	 5	 Up	 Up
 6	 6	 Exit	 Exit / Cancel / Clear
 7	 7	 Left	 Left
 8	 8	 OK/Enter	 OK
 9	 9	 Right	 Right
 Recall	 Back / Return	 Sleep	 Sleep / Timer
 0	 0	 Down	 Down
 List	 Smart / List	 Source	 AV / Input / RDS
 Vol+	 Vol+	 Red	 Red / Netflix / Search
 Info/Display	 Display / Media	 Green	 Green / APP / Repeat
 Info/Display	 Info / Angle	 Yellow	 Yellow / YouTube / Repeat





Original	Replacement
Blue	Blue / Prime Video / Random
TTX	Text / Goto
Index	D.Menu / Top
Hold	Shift + Stop /
I/II/Audio	Audio / Lang I/II
Repeat/Rec	Rec / Rec Mode
Repeat/Rec	Shift + Green / APP /
Stop/Reveal	Stop / Hold
Play	Play / Slow
Pause	Pause / Step / Freeze
Size	Zoom / Size
Subtitle	Subtitle / EQ
<</Subpage	<< / Tune-
>>	>> / Tune+
Tv/Radio	TV/Radio /
I<<	I<< / Preset-
EPG	Guide / EPG / -/--

Original	Replacement
>>I	>>I / Preset+
FAV	Fav / Marker / PC

