 



 





 
 

 
 

 

 
 
 

 



 
 
 

 
 






Original	Replacement
 Power	 Power
 Enter	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Vol+	 Vol +
 Vol-	 Vol -
 >>I/Next	 >>I
 I<</Prev	 I<<
 Mute	 Mute
 Back	 Back
 Audio	 Dual
 Time shift	 Shift + Guide
 1	 1
 2	 2
 3	 3

Original	Replacement
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Text	 Text
 EPG	 Guide
 Blue	 Blue
 Record	 Rec
 Stop	 Stop
 Play	 Play
 <</FR	 <<





Original		Replacement	
	>>/FF		>>
	Pause		Pause
	Source		AV
	Subtitle		Subt
	Menu		Menu
	Home		Smart
	Music		Exit
	Copy		Pre Ch
	Resolution		Eject
	Setup		Options
	Repeat	+	Shift + Text
	Display		Info
	Goto		Sleep
	Timer	+	Shift + AV
	Browser	+	Shift + Pre Ch
	Zoom	+	Shift + Eject

Original		Replacement	

