



Original	Replacement
	Power
	Display / Media
	Setup / OPT /
	Mute / Dimmer
	Menu / Home
	Sound / Title
	Fav / Marker / PC
	Zoom / Size
	TV/Radio /
	Info / Angle
	Vol-
	Vol+
	Guide / EPG / -/-
	Back / Return
	Up
	Left
	OK

Original	Replacement
	Right
	Down
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Picture / Format
	0
	Text / Goto
	Rec / Rec Mode
	Play / Slow
	Stop / Hold



