 
 
 





 
 





 
 









 





Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Red/Sub.	 Red / Netflix / Search
 Green/TTX	 Green / APP / Repeat
 Yellow/Audio	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 EPG	 Guide / EPG / -/--
 Info	 Info / Angle
 Tv/Radio	 TV/Radio /
 Rec	 Rec / Rec Mode
 DTV	 Smart / List
 Video	 Shift + 4
 Music	 Audio / Lang I/II
 Picture	 Picture / Format
 APP	 Shift + Green / APP /
 Setting	 Setup / OPT /
 Web	 Display / Media

Original	Replacement
 Goto	 Text / Goto
 Home	 Shift + Menu /
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Del	 Exit / Cancel / Clear
 >>	 >>  / Preset+
 Vol+	 Vol+
 >>	 >> / Tune+
  <<	  << / Preset-
 Vol-	 Vol-
 <<	 << / Tune-
 1	 1





Original		Replacement		Original		Replacement	
2 ABC	2	DVD 2	2				
3 DEF	3	CD - STB 3	3				
4 GHI	4	VIDEO 4	4				
5 JKL	5	TAPE 5	5				
6 MNO	6	TUNER 6	6				
7 PQRS	7	AUX - HDD 7	7				
8 TUV	8	USB 8	8				
9 WXYZ	9	BLUETOOTH 9	9				
▶▶	Play	SLOW ▶	Play / Slow				
⏸	Pause	STEP - FREEZE ⏸	Pause / Step / Freeze				
0	0	HDMI - BAT 0	0				
■	Stop	HOLD ■	Stop / Hold				

