




 










 



 

 
 
 
 
 
 
 

 






Original	Replacement
 Power	 Power
 (*)	 Subt
 [=]	 Text
 O	 TV/R
 [ +]/◆	 Info
 ?	 Options
 I-II/[≡i]	 Dual
 16:9/+	 Format
 (<>)/X	 Exit
 Inst	 Smart
 Input	 AV
 P<P	 Pre Ch
 P+	 Ch +
 P-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right

Original	Replacement
 Left	 Left
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu
 Red/Picture	 Red
 Green/Audio	 Green
 Yellow/Timer	 Yellow
 Blue/Headphon	 Blue
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9





Original		Replacement		Original		Replacement	
0	0	0	0				
PP	PP	RETURN BACK	Back				
[Mute]	Mute	MUTE	Mute				

