
























 







Original	Replacement	Replacement
Power		Power
Recall		Back / Return
CC		Subtitle / EQ
Text		Text / Goto
Smart		Smart / List
Sleep		Sleep / Timer
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Reset		Exit / Cancel / Clear

Original	Replacement	Replacement
CH / Guide		Guide / EPG / -/--
Up		Up
M		Menu / Home
A / CH		Info / Angle
Down		Down
Vol+		Vol+
Vol-		Vol-
Left / -		Left
Right / +		Right
Mute		Mute / Dimmer
CH+		CH+ / Page+
CH-		CH- / Page-
A		Red / Netflix / Search
B		Green / APP / Repeat
C		Yellow / YouTube / Repeat
D		Blue / Prime Video / Random
G		Shift + Yellow / YouTube / Repeat






















Original	Replacement	Original	Replacement
Clock	 +  Shift + Sleep / Timer		
E	 +  Shift + Red / Netflix		
F	 +  Shift + Green / APP		
A / V	 AV / Input / RDS		












Original	Replacement	Replacement
Power		Power
Recall		Back / Return
CC		Subtitle / EQ
Text		Text / Goto
Smart		Smart / List
Sleep		Sleep / Timer
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Reset		Exit / Cancel / Clear

Original	Replacement	Replacement
Up		Up
CH / Guide		Guide / EPG / -/-
Down		Down
M		Menu / Home
Vol+		Vol+
A / CH		Info / Angle
Vol-		Vol-
Mute		Mute / Dimmer
Left / -		Left
Right / +		Right
CH+		CH+ / Page+
CH-		CH- / Page-
A		Red / Netflix / Search
B		Green / APP / Repeat
C		Yellow / YouTube / Repeat
D		Blue / Prime Video / Random
Clock	 + 	Shift + Sleep / Timer



































 
 

 
Original	Replacement	
E	 + 	Shift + Red / Netflix /
F	 + 	Shift + Green / APP /
G	 + 	Shift + Yellow / YouTube /
A / V		AV / Input / RDS

Original	Replacement





Original	Replacement	Original	Replacement
Power		Power	
Recall		Back / Return	
CC		Subtitle / EQ	
Text		Text / Goto	
Smart		Smart / List	
Sleep		Sleep / Timer	
1		1	
2		2	
3		3	
4		4	
5		5	
6		6	
7		7	
8		8	
9		9	
0		0	
Reset		Exit / Cancel / Clear	

Original	Replacement	Original	Replacement
CH / Guide		Guide / EPG / -/--	
Up		Up	
Down		Down	
A / CH		Info / Angle	
M		Menu / Home	
Right / +		Right	
Left / -		Left	
Vol+		Vol+	
Vol-		Vol-	
Mute		Mute / Dimmer	
CH+		CH+ / Page+	
CH-		CH- / Page-	
A		Red / Netflix / Search	
B		Green / APP / Repeat	
C		Yellow / YouTube / Repeat	
D		Blue / Prime Video / Random	
E		Shift + Red / Netflix / Search	





Original	Replacement	Original	Replacement
F	 +  Shift + Green / APP /		
G	 +  Shift + Yellow / YouTube /		
Clock	 +  Shift + Sleep / Timer		
A / V	 AV / Input / RDS		

