











 

 

 
 
 





Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ✓	 Guide / EPG / -/--
 0	 0
 Red / <<<	 Red / Netflix / Search
 Red / <<<	 <<< / Tune-
 Green / Stop	 Green / APP / Repeat
 Green / Stop	 Stop / Hold

Original	Replacement
 Yellow / Play	 Play / Slow
 Yellow / Play	 Yellow / YouTube / Repeat
 Blue / >>>	 >>> / Tune+
 Blue / >>>	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI	 D.Menu / Top
 Exit / Recall	 Back / Return
 Exit / Recall	 Exit / Cancel / Clear
 Info	 Info / Angle
 Prog +	 CH+ / Page+
 TV / Radio	 TV/Radio /
 Vol +	 Vol+
 Prog -	 CH- / Page-





Original	Replacement	Original	Replacement
 Menu	 Menu / Home		
 Vol -	 Vol-		
 TV/SAT	 Smart / List		
 TXT	 Text / Goto		
 Stop	 Pause / Step / Freeze		
 EXT	 Display / Media		
 SAT1 + OK	 Shift + 2		
 SAT2 + OK	 Shift + 3		
 TV + OK	 Shift + 1		
 PIP	 Picture / Format		

Original	Replacement





Original	Replacement
Mute	Mute / Dimmer
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
✓	Guide / EPG / -/--
0	0
A/B	Shift + Yellow / YouTube /
Red / <<<	<<< / Tune-
Red / <<<	Red / Netflix / Search
Green / Stop	Green / APP / Repeat

Original	Replacement
Green / Stop	Stop / Hold
Yellow / Play	Play / Slow
Yellow / Play	Yellow / YouTube / Repeat
Blue / >>>	>>> / Tune+
Blue / >>>	Blue / Prime Video / Random
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
SFI	D.Menu / Top
Exit / Recall	Exit / Cancel / Clear
Exit / Recall	Back / Return
Info	Info / Angle
Prog +	CH+ / Page+
TV / Radio	TV/Radio /
Vol +	Vol+





Original	Replacement	Original	Replacement
Prog -	CH- / Page-		
Menu	Menu / Home		
Vol -	Vol-		
TV/SAT	Smart / List		
TXT	Text / Goto		
Stop	Pause / Step / Freeze		
EXT	Display / Media		
SAT1 + OK	Shift + 2		
SAT2 + OK	Shift + 3		
TV + OK	Shift + 1		

Original	Replacement





Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ✓	 Guide / EPG / -/--
 0	 0
 A/B	 Shift + Yellow / YouTube /
 Red / <<	 Red / Netflix / Search
 Red / <<	 << / Tune-
 Green / Stop	 Stop / Hold

Original	Replacement
 Green / Stop	 Green / APP / Repeat
 Yellow / Play	 Play / Slow
 Yellow / Play	 Yellow / YouTube / Repeat
 Blue / >>	 >> / Tune+
 Blue / >>	 Blue / Prime Video / Random
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI	 D.Menu / Top
 Exit / Recall	 Back / Return
 Exit / Recall	 Exit / Cancel / Clear
 Info	 Info / Angle
 Prog +	 CH+ / Page+
 TV / Radio	 TV/Radio /
 Vol +	 Vol+





Original	Replacement
Prog -	CH- / Page-
Menu	Menu / Home
Vol -	Vol-
TV/SAT	Smart / List
TXT	Text / Goto
Stop	Pause / Step / Freeze
EXT	Display / Media
SAT1 + OK	Shift + 2
SAT2 + OK	Shift + 3
TV + OK	Shift + 1

Original	Replacement

