





Original	Replacement
 Power	 Power
 Return	 Back
 Function	 Smart
 Open/Close	 Eject
 Goto	 Pre Ch
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide
 Memory	 Media

Original	Replacement
 5.1 CH	 Shift + 5
 2.1 CH	 Shift + 2
 Sound	 Dual
 Dimmer	 TV/R
 Volume+	 Vol +
 Volume-	 Vol -
 DD Pro Logic	 List
 Setup	 Options
 Menu	 Menu
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right
 Down	 Down
 Stop	 Stop
 Play	 Play
 Pause	 Pause





	Original	Replacement	Original	Replacement
	< Slow	 Ch -		
	Slow >	 Ch +		
	<< Prev	 <<		
	Next >>	 >>		
	<< / Tuning-	 <<		
	>> / Tuning+	 >>		
	Clear	 Exit		
	Display	 Info		
	Zoom	 Shift + Eject		
	Audio	 Sleep		
	Angle	 Format		
	Subtitle	 Subt		
	FM Mode / Repeat A-B	 Red		
	Band / Repeat	 Green		

