



 
 


 


 

 





Original	Replacement
	Power
	1
	2
	3
	TV/SAT
	4
	5
	6
	Radio
	7
	8
	9
	Mute
	0
	Red / i
	Red / i
	Green / Audio

Original	Replacement
	Green / Audio
	Yellow / Subtitle
	Yellow / Subtitle
	Menu
	Blue / UHF
	Up
	White / Timer
	White / Timer
	Left
	OK
	Right
	Exit
	Down
	V+
	P+
	V-
	?





The image shows a black Mandis remote control. At the top, there are three buttons: a red power button, a black 'DIMMER MUTE' button, and a yellow 'SHIFT' button. Below these are four function buttons: TV, DVD, SAT, and AUX. The TV section includes buttons for SLOW, STEP-FREEZE, HOLD, REC MODE, and various playback controls like play, pause, stop, and fast forward. The DVD section includes buttons for TUNE-, TUNE+, PRESET-, PRESET+, and other navigation controls. The SAT section includes buttons for TUNE-, TUNE+, PRESET-, PRESET+, and other navigation controls. The AUX section includes buttons for TUNE-, TUNE+, PRESET-, PRESET+, and other navigation controls. Below these are buttons for SOUND, AUDIO, SUBTITLE, and PROGRAM. Further down are buttons for FORMAT, SIZE, TIMER, and TV/RADIO. At the bottom of the main section are buttons for PICTURE, ZOOM, SLEEP, and AV INPUT. Below this is a row of buttons: HOME, MENU, INFO, and a central directional pad with an OK button. Below the directional pad are buttons for CLEAR, EXIT, CANCEL, LIST, SMART, MEDIA, DISPLAY, and RETURN. Below these are buttons for TV, DVD, and CD-STD. Below these are buttons for VIDEO, TAPE, and TUNER. Below these are buttons for AUX-HDD, USB, and BLUETOOTH. Below these are buttons for 7, 8, and 9. Below these are buttons for GUIDE, 0, and FAV MARKER. At the bottom are buttons for NETFLIX, APP, YouTube, and Prime Video. Below these are buttons for SEARCH, REPEAT, REPEAT A-B, and RANDOM. At the very bottom is the Mandis Shop logo and the website address www.mandis.tv.