















 

 











 































 









Original		Replacement		Original		Replacement	
	TV		TV/Radio /		Alt		Fav / Marker / PC
	TV		Shift + 1		0		0
	Audio		Audio / Lang I/II		i		Info / Angle
	TV / VCR		AV / Input / RDS		Setup		Setup / OPT /
	Power		Power		Exit		Exit / Cancel / Clear
	1		1		Up		Up
	2		2		Navigator		Smart / List
	3		3		Left		Left
	Text		Text / Goto		OK		OK
	4		4		Right		Right
	5		5		Vol +		Vol+
	6		6		Down		Down
	Subtitle		Subtitle / EQ		CH +		CH+ / Page+
	7		7		Vol -		Vol-
	8		8		Mute		Mute / Dimmer
	9		9		Recall		Back / Return
	Sound		Sound / Title		CH -		CH- / Page-





Original	Replacement	Original	Replacement
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 EPG	 Guide / EPG / -/--		
 Check	 Display / Media		

Original	Replacement

