



Original	Replacement	Original	Replacement
Standby	Power	Up / CH+	Ch +
Mute	Mute	Down / CH-	Down
1	1	Down / CH-	Ch -
2	2	Right / Vol+	Right
3	3	Right / Vol+	Vol +
4	4	Left / Vol-	Vol -
5	5	Left / Vol-	Left
6	6	OK	Ok
7	7	Menu	Menu
8	8	Exit	Exit
9	9	Text	Text
0	0	List	List
Recall	Back	Audio	Dual
Pause	Pause	Subtitle	Subt
Guide	Guide	P/N / Search	Shift + TV/R
Info	Info	TV / Radio	TV/R
Up / CH+	Up	DTV/VCR / Mode	AV





Original	Replacement	Original	Replacement
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

