























 

 



























Original	Replacement
 Power	 Power
 Open/Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit / Cancel / Clear
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+

Original	Replacement
 Play	 Play / Slow
 Pause/Step	 Pause / Step / Freeze
 Stop	 Stop / Hold
 DVD Menu	 D.Menu / Top
 Title	 Sound / Title
 Up	 Up
 Enter	 OK
 Down	 Down
 Right	 Right
 Left	 Left
 Return	 Back / Return
 Display	 Display / Media
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Setup	 Setup / OPT /
 Marker	 Fav / Marker / PC





Original	Replacement	Original	Replacement
- SEARCH Search	Red / Netflix / Search		
PROGRAM Program	Shift + TV/Radio / Program		
ZOOM Zoom	Zoom / Size		
REPEAT Repeat	Green / APP / Repeat		
A-B	Yellow / YouTube / Repeat		
RESOLUTION Resolution	TV/Radio /		
KARAOKE Karaoke ECHO	Blue / Prime Video / Random		
TV POWER Power Tv	Shift + Power		
AV AV Tv	AV / Input / RDS		
PR/CH+ Tv	CH+ / Page+		
PR/CH- Tv	CH- / Page-		
VOL+ Tv	Vol+		
VOL- Tv	Vol-		

Original	Replacement

