

 

 















 



 



 







 


 
 











 











 



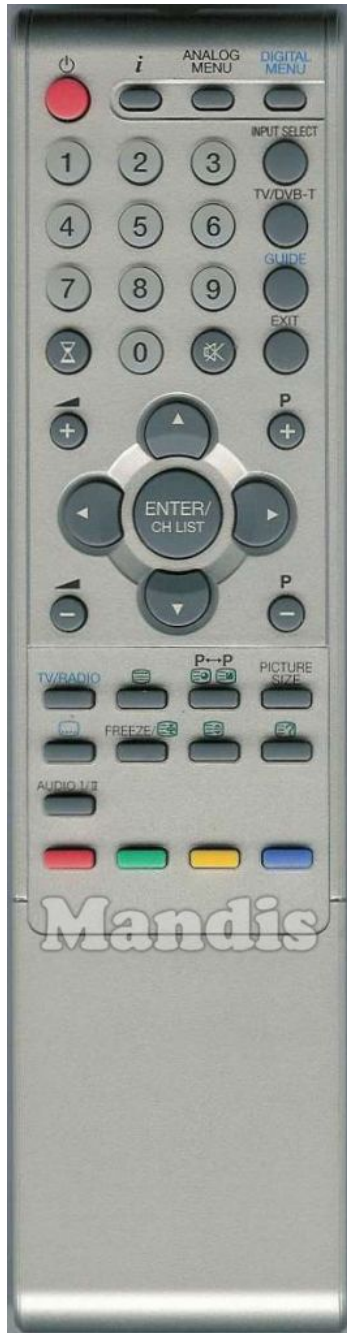 












 



 



Original		Replacement		Original		Replacement	
	Power		Power		0		0
	i		Info / Angle		Mute		Mute / Dimmer
	Analog Menu		Menu / Home		Exit		Exit / Cancel / Clear
	Digital Menu		D.Menu / Top		Vol+		Vol+
	1		1		Up		Up
	2		2		P+		CH+ / Page+
	3		3		Left		Left
	Input Select		AV / Input / RDS		Enter/CH List		OK
	4		4		Enter/CH List		Smart / List
	5		5		Right		Right
	6		6		Vol-		Vol-
	TV/DVB-T		Display / Media		Down		Down
	7		7		P-		CH- / Page-
	8		8		TV/Radio		TV/Radio /
	9		9		[≡]		Text / Goto
	Guide (EPG)		Guide / EPG / -/-		[≡o] [≡o]/P<->P		Back / Return
	Timer		Sleep / Timer		Picture Size		Picture / Format





	Original	Replacement	Original	Replacement
	 [...]	 Subtitle / EQ		
	 Freeze / [=+]	 Pause / Step / Freeze		
	 [=◇]	 Zoom / Size		
	 [=?]	 Setup / OPT /		
	 Audio I/II	 Audio / Lang I/II		
	 Red	 Red / Netflix / Search		
	 Green	 Green / APP / Repeat		
	 Yellow	 Yellow / YouTube / Repeat		
	 Blue	 Blue / Prime Video / Random		

