
 




 





Original	Replacement	Original	Replacement
	Power		CEC
	1		Smart / List
	2		D.Menu / Top
	3		Exit / Cancel / Clear
	4		Menu / Home
	5		Up
	6		Back / Return
	7		Left
	8		OK
	9		Right
	FAV		Down
	0		Guide
	Red		Tools
	Green		Vol+
	Yellow		Source
	Blue		CH+ / Page+
			Vol-
			Mute / Dimmer





Original	Replacement	Original	Replacement
	PR-		CH- / Page-
	I<		I<< / Preset-
	>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	[<>]		Picture / Format
	Dialog		Audio / Lang I/II
	[...]		Subtitle / EQ
	Tv/Radio		TV/Radio /
	My Media		Display / Media

