














 







 
 
 








Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0
	TXT		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original	Replacement	Original	Replacement
	Exit		Exit / Cancel / Clear
	?		D.Menu / Top
	@		Smart / List
	Menu		Menu / Home
	Up		Up
	Back		Back / Return
	Left		Left
	OK		OK
	Right		Right
	Tools		Setup / OPT /
	Down		Down
	Guide		Guide / EPG / -/-
	Vol+		Vol+
	Source		AV / Input / RDS
	P+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer





Original	Replacement
P-	CH- / Page-
<	<< / Preset-
>	>> / Preset+
<<	<< / Tune-
>>	>> / Tune+
Rec	Rec / Rec Mode
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
3D	Picture / Format
..O	Zoom / Size
[...].	Subtitle / EQ
Netflix	+ Shift + Red / Netflix /
My Media	Display / Media

Original	Replacement

