






























 




















 

















Original	Replacement	Original	Replacement
 M	 Smart / List	 Menu	 Menu / Home
 Power	 Power	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 Vol-	 Vol-
 6	 6	 Vol+	 Vol+
 7	 7	 Play / Pause	 Play / Slow
 8	 8	 Stop	 Stop / Hold
 9	 9	 I<	 I<< / Preset-
 Fav	 Fav / Marker / PC	 >I	 >>I / Preset+
 0	 0	 Repeat	 Green / APP / Repeat
 Mute	 Mute / Dimmer	 AL 1	 CH+ / Page+
 i	 Info / Angle	 AL 2	 CH- / Page-
 [ * ]	 D.Menu / Top	 S	 Display / Media
 EQ	 Subtitle / EQ		

