



Original	Replacement
On	Power
Off	+  Shift + Power
Mute	Mute / Dimmer
AVR	+  Shift + AV / Input / RDS
DVD	+  Shift + 2
VID1	+  Shift + 4
HDMI1	+  Shift + 1
AM/FM	TV/Radio /
CD	+  Shift + 3
VID2	+  Shift + 8
HDMI2	+  Shift + 6
AUX	+  Shift + 7
Tape	+  Shift + 5
VID3	+  Shift + 0
HDMI3	+  Shift + 9
Sleep	Sleep / Timer
Test	Text / Goto

Original	Replacement
6CH	Sound / Title
Vol+	Vol+
Surr.	Eject / Surround
OSD	Display / Media
Vol-	Vol-
CH./[≡?]	Info / Angle
SPKR/Menu	Menu / Home
Up	Up
Left	Left
OK	OK
Right	Right
Digital/[≡X]	Setup / OPT /
Down	Down
Delay/Prev. CH.	Back / Return
1	1
2	2
3	3





Original	Replacement	Original	Replacement
 4	 4	 Dolby Surr	 Blue / Prime Video / Random
 5	 5	 DTS Surr.	 Yellow / YouTube / Repeat
 6	 6	 DTS Neo 6	 Green / APP / Repeat
 7	 7	 Night	 Shift + Sleep / Timer
 8	 8	 Logic 7	 Red / Netflix / Search
 Tun-M/[≡+]	 CH+ / Page+	 Stereo	 Audio / Lang I/II
 9	 9	 I<</Skip Down	 Shift + I<< / Preset-
 0	 0	 Skip Up/>>I	 Shift + >>I / Preset+
 Mem/[≡◆]	 CH- / Page-	 DIM	 Shift + Mute / Dimmer
 Tuning ▲	 >> / Tune+	 << DVD	 Shift + << /
 Direct	 Smart / List	 Play DVD	 Play / Slow
 Clear	 Exit / Cancel / Clear	 >> DVD	 Shift + >> /
 Preset ▲	 >>I / Preset+	 Stop DVD	 Stop / Hold
 Tuning ▼	 << / Tune-	 Pause DVD	 Pause / Step / Freeze
 Tone	 D.Menu / Top		
 RDS	 AV / Input / RDS		
 Preset ▼	 I<< / Preset-		

