



 



 



 
 





 

 
 



 
 




 
 
 
 
 


 
 
 
 
 
 

 
 

 
 
 
 
 





 




 







Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol +
 Input	 AV	 Vol-	 Vol -
 Home	 Shift + Smart	 CH+	 Ch +
 YouTube	 Smart	 CH-	 Ch -
 1	 1	 Q.View	 Options
 2	 2	 Guide	 Guide
 3	 3	 Menu	 Menu
 4	 4	 Return	 Back
 5	 5	 Exit	 Exit
 6	 6	 .	 3D
 7	 7	 CH.List	 List
 8	 8	 MTS/SAP	 Dual
 9	 9	 CC	 Subt
 0	 0	 Q.Menu	 D. Menu
 FAV	 Pre Ch	 OK	 Ok
 Mute	 Mute	 Up	 Up
 Info	 Info	 Down	 Down





Original	Replacement	Original	Replacement
 Right	 Right		
 Left	 Left		
 Sleep	 Sleep		
 S.Mode	 +  Shift + Dual		
 USB	 Media		
 P.Mode	 +  Shift + Format		
 H.Lock	 +  Shift + Stop		
 P.Size	 Format		
 Red	 Red		
 Play	 Play		
 Pause	 Pause		
 Green	 Green		
 <<	 <<		
 Yellow	 Yellow		
 >>	 >>		
 Blue	 Blue		
 Stop	 Stop		

