





 



 

 
 
 

 



 



 







 





 









 



 







Original	Replacement	Original	Replacement
 Menu	 Menu / Home	 8	 8
 Up	 Up	 9	 9
 CH+	 CH+ / Page+	 Recall	 Back / Return
 Power	 Power	 0	 0
 Left	 Left	 -/--	 Guide / EPG / -/--
 Vol-	 Vol-	 Tv/AV	 AV / Input / RDS
 Right	 Right	 CCD	 Smart / List
 Vol+	 Vol+	 Mute	 Mute / Dimmer
 CH-	 CH- / Page-	 P.STD	 Picture / Format
 Down	 Down	 Exit	 Exit / Cancel / Clear
 1	 1	 Display	 Display / Media
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		

