





Original		Replacement		Original		Replacement	
	Power		Power		Up		Up
	EPG		Guide / EPG / -/--		Display		Display / Media
	REP		TV/Radio /		Left		Left
	Mute		Mute / Dimmer		OK		OK
	Rec List		Shift + Rec / Rec Mode		Right		Right
	CH List		Smart / List		Menu		Menu / Home
	Subtitle		Subtitle / EQ		Down		Down
	Eject		Eject / Surround		Exit		Exit / Cancel / Clear
	Rec		Rec / Rec Mode		1		1
	Stop		Stop / Hold		2		2
	I<<		I<< / Preset-		3		3
	>>I		>>I / Preset+		4		4
	Pause		Pause / Step / Freeze		5		5
	Play		Play / Slow		6		6
	<<		<< / Tune-		7		7
	>>		>> / Tune+		8		8
	Source		AV / Input / RDS		9		9





Original		Replacement	
	0		0
	Recall		Back / Return
	Fav		Fav / Marker / PC
	Vol +		Vol+
	Picture		Picture / Format
	Nicam / A2		Audio / Lang I/II
	CH +		CH+ / Page+
	Vol -		Vol-
	Sound		Sound / Title
	Sleep		Sleep / Timer
	CH -		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue / Screen		Blue / Prime Video / Random
	Setup / TV/Txt		Setup / OPT /
	D-Menu /		D.Menu / Top

Original		Replacement	
	Title / Reveal		Shift + Sound / Title
	PRO		Shift + Display / Media
	LAN / Hold		Shift + Smart / List
	Size / A-B		Zoom / Size
	Goto / Subpage		Text / Goto
	Index / Slow		Info / Angle

