











 



































 

























 










 

 

 


 



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Picture		Picture / Format
	Aspect		Shift + Picture / Format
	Sleep		Sleep / Timer
	Sound		Sound / Title
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0
	Recall		Back / Return
	Display		Display / Media
	Up		Up
	Input		AV / Input / RDS
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol +		Vol+
	TV / Radio		TV/Radio /
	EPG		Guide / EPG / -/-
	CH +		CH+ / Page+
	Vol -		Vol-
	Eject		Eject / Surround
	CH -		CH- / Page-





Original	Replacement
 Subtitle	 Subtitle / EQ
 CH List	 Smart / List
 Rec	 Rec / Rec Mode
 Rec List	 Shift + Smart / List
 TV/TXT / D.Pro	 Shift + TV/Radio / Program
 TV/TXT / D.Pro	 Text / Goto
 Cancel / D.Rep	 Shift + Exit / Cancel / Clear
 Cancel / D.Rep	 Shift + Green / APP /
 Reveal / D.Goto	 Shift + Text /
 Nicam/A2 /	 Shift + Play /
 Nicam/A2 /	 Shift + Audio / Lang I/II
 Index / I<<<	 I<<< / Preset-
 Hold / >>>I	 >>>I / Preset+
 Hold / >>>I	 Shift + Stop /
 Size / D.Zoom	 Zoom / Size
 Subpage / D.Title	 Shift + Sound / Title
 <<<	 <<< / Tune-

Original	Replacement
 >>>	 >>> / Tune+
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Red / D.Set	 Shift + OK
 Red / D.Set	 Red / Netflix / Search
 Green / D.Menu	 D.Menu / Top
 Green / D.Menu	 Green / APP / Repeat
 Yellow / D.Sub.	 Yellow / YouTube / Repeat
 Yellow / D.Sub.	 Shift + Subtitle / EQ
 Blue / D.Lan	 Blue / Prime Video / Random
 Blue / D.Lan	 Audio / Lang I/II

