



































 


Original	Replacement
 Power	 Power
 Open/Close	 Eject
 VCR	 Smart
 DVD	 Media
 Input	 AV
 1/Tracking-	 1
 2	 2
 3/Tracking+	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 System	 D. Menu
 Clear	 Exit

Original	Replacement
 Setup	 Options
 Display	 Info
 Title/PBC	 Back
 Menu	 Menu
 Up/PR+	 Up
 Down/PR-	 Down
 Right	 Right
 Left	 Left
 OK/Enter	 Ok
 Subtitle	 Subt
 Audio	 Dual
 Search	 Shift + TV/R
 Zoom	 Shift + Eject
 <<	 <<
 Play	 Play
 Pause	 Pause
 >>	 >>





	Original	Replacement	Original	Replacement
	I<<			I<<
	Stop			Stop
	>>I			>>I
	Rec			Rec
	Speed			Format
	Repeat			Text
	A-B			Red
	Tv/VCR			TV/R
	3D			3D
	Mark			List
	Angle			Guide
	CM Skip			Yellow
	Replay			Green
	Last CH			Pre Ch
	Program			Sleep

