



 

























Original	Replacement
	 Power
	 Eject / Surround
	 Info / Angle
	 Exit / Cancel / Clear
	 Menu / Home
	 Rec / Rec Mode
	 Up
	 Left
	 OK
	 Right
	 Down
	 Pause / Step / Freeze
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Stop / Hold
	 1

Original	Replacement
	 2
	 3
	 Display / Media
	 4
	 5
	 6
	 Smart / List
	 7
	 8
	 9
	 0
	 Mute / Dimmer
	 AV / Input / RDS
	 Green / APP / Repeat
	 D.Menu / Top

