



| Original | Replacement |
|--------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|
|  Power |  Power |
|  Netflix |  Shift + Red / Netflix / |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  TV |  TV/Radio / |
|  0 |  0 |
|  Recall |  Fav / Marker / PC |
|  Vol+ |  Vol+ |
|  Mute |  Mute / Dimmer |
|  PR+ |  CH+ / Page+ |

| Original | Replacement |
|-------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
|  Vol- |  Vol- |
|  i |  Info / Angle |
|  PR- |  CH- / Page- |
|  Menu |  Menu / Home |
|  Up |  Up |
|  Q.Menu |  D.Menu / Top |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Back |  Back / Return |
|  Down |  Down |
|  EXit |  Exit / Cancel / Clear |
|  World |  Smart / List |
|  Camera/Music/Ph |  Display / Media |
|  Guide |  Guide / EPG / -/-- |
|  */o |  Picture / Format |
|  Games |  AV / Input / RDS |



