



| Original  | Replacement  |
|---|--|
|    |  Mute / Dimmer      |
|    |  Power              |
|    |  TV/Radio /         |
|    |  Guide / EPG / -/-- |
|    |  Fav / Marker / PC  |
|    |  1                  |
|    |  2                  |
|    |  3                  |
|    |  4                  |
|    |  5                  |
|   |  6                 |
|  |  7                |
|  |  8                |
|  |  9                |
|  |  Menu / Home      |
|  |  0                |
|  |  Back / Return    |

| Original  | Replacement   |
|---|---|
|    |  Info / Angle                  |
|    |  Vol+                          |
|    |  OK                            |
|    |  CH+ / Page+                   |
|    |  Up                            |
|    |  Left                          |
|    |  Right                         |
|    |  Vol-                          |
|    |  Down                          |
|    |  CH- / Page-                   |
|   |  Exit / Cancel / Clear        |
|  |  Red / Netflix / Search      |
|  |  Green / APP / Repeat        |
|  |  Yellow / YouTube / Repeat   |
|  |  Blue / Prime Video / Random |
|  |  << / Tune-                  |
|  |  << / Preset-                |





| Original |                  | Replacement |                   |
|----------|------------------|-------------|-------------------|
|          | Play / Pause     |             | Play / Slow       |
|          | >> / >>          |             | >> / Tune+        |
|          | >> / >>          |             | >>  / Preset+     |
|          | Library          |             | Display / Media   |
|          | Rec              |             | Rec / Rec Mode    |
|          | Stop             |             | Stop / Hold       |
|          | Text             |             | Text / Goto       |
|          | Personal Planner |             | Smart / List      |
|          | Sub / Audio      |             | Audio / Lang I/II |
|          | Sub / Audio      |             | Subtitle / EQ     |
|          | History          |             | D.Menu / Top      |
|          | PIP              |             | Picture / Format  |
|          | PIP Swap         |             | Zoom / Size       |
|          | PIP Position     |             | Setup / OPT /     |
|          | Sleep Timer      |             | Sleep / Timer     |

| Original | Replacement |
|----------|-------------|
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |

