



Original	Replacement
 Standby	 Power
 Auto	 Smart / List
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 Vol+	 Vol+
 Aspect	 Shift + Picture / Format

Original	Replacement
 Audio	 Audio / Lang I/II
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Display	 Display / Media
 CH-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Input	 AV / Input / RDS
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer
 FAV	 Fav / Marker / PC





Original	Replacement
FAV-	SHIFT + CH PAGE → Shift + CH- /
FAV+	SHIFT + CH PAGE → Shift + CH+ /
EPG	GUIDE EPG → Guide / EPG / -/--
TEXT	GOTO TEXT → Text / Goto
HOLD	SHIFT + HOLD → Shift + Stop /
TV/RADIO	PROGRAM TV/RADIO → TV/Radio /
SUBTITLE	EQ SUBTITLE → Subtitle / EQ
INDEX	ANGLE INFO → Info / Angle
SIZE	SIZE ZOOM → Zoom / Size
REVEAL	OPT-TOOLS SETUP → Setup / OPT /
SUBPAGE	SURROUND → Eject / Surround
MEDIA	SHIFT + MEDIA DISPLAY → Shift + Display / Media
Play	SLOW → Play / Slow
Pause	STEP-FREEZE → Pause / Step / Freeze
<<	TUNE- → << / Tune-
>>	TUNE+ → >> / Tune+
Rec	REC MODE → Rec / Rec Mode

Original	Replacement
Stop	HOLD → Stop / Hold
I<<	PRESET- → I<< / Preset-
>>I	PRESET+ → >>I / Preset+
Red	NETFLIX SEARCH → Red / Netflix / Search
Green	APP REPEAT → Green / APP / Repeat
Yellow	YouTube REPEAT A-B → Yellow / YouTube / Repeat
Blue	Prime Video RANDOM → Blue / Prime Video / Random

