



Original	Replacement
TEST	Text / Goto
1	1
1 FM/AM	Shift + 1
2	2
2 FM/AM	Shift + 2
3	3
3 FM/AM	Shift + 3
Effect	Picture / Format
4	4
4 FM/AM	Shift + 4
5	5
5 FM/AM	Shift + 5
6	6
6 FM/AM	Shift + 6
7/P	Shift + 7
7 FM/AM	7
8	8

Original	Replacement
8 FM/AM	Shift + 8
9	9
9 FM/AM	Shift + 9
Level- SURR L	Down
Level - SURR R	Shift + Down
Level- Center	Shift + CH- /
Level- SUBWFR	Left
Level- Front L	Vol-
Level- Front R	CH- / Page-
Level+ SURR L	Up
Level+ SURR R	Shift + Up
Level+ Center	Shift + CH+ /
Level+ SUBWFR	Right
Level+ Front L	Vol+
Level+ Front R	CH+ / Page+
10/Return	Shift + Guide / EPG / -/-
10 FM/AM	Guide / EPG / -/-
















 







Original	Replacement
Audio Standby	Audio / Lang I/II
1	1
2	2
3	3
TV Standby	Power
4	4
5	5
6	6
VCR Standby	Shift + Power
7/P	7
DVD Standby	Shift + 2
Play/TA/News/Info	Play / Slow
Sleep	Sleep / Timer
I<</PTY-	I<< / Preset-
Pause/PTY Search	Pause / Step / Freeze
>>I/PTY+	>>I / Preset+
Stop/Display	Stop / Hold

Original	Replacement
FM/AM	Shift + TV/Radio / Program
VCR	Shift + 4
Analog/Digital	Smart / List
FM/Mode	AV / Input / RDS
Surround	Eject / Surround
DSP	Text / Goto
Surround DSP	Sound / Title
Dimmer	Shift + Mute / Dimmer
Tv/Video	TV/Radio /
Muting	Mute / Dimmer
VCR CH+	Shift + CH+ /
Tv CH+	CH+ / Page+
Tv Vol+	Shift + Vol+
Vol+	Vol+
VCR CH-	Shift + CH- /
Tv CH-	CH- / Page-
Tv Vol-	Shift + Vol-



Mode



Original	Replacement	Original	Replacement
 1 TV Sound	 1	 Stop	 Stop / Hold
 2 TV Sound	 2	 TV Sound	 Sound / Title
 3 TV Sound	 3		
 4 TV Sound	 4		
 5 TV Sound	 5		
 6 TV Sound	 6		
 7 TV Sound	 7		
 8 TV Sound	 8		
 9 TV Sound	 9		
 10 TV Sound	 Guide / EPG / -/--		
 0 TV Sound	 0		
 +10 TV Sound	 Fav / Marker / PC		
 Play	 Play / Slow		
 I<<	 I<< / Preset-		
 Pause	 Pause / Step / Freeze		
 >>I	 >>I / Preset+		
 Rec Pause	 Rec / Rec Mode		

