




 
 


 

 





 



 



 

 

 

 

 



 



 







 

 

 



 







 




Original	Replacement	Original	Replacement
 (AC) Power	 Power	 Program	 Shift + Sleep
 1	 1	 Stop	 Stop
 2	 2	 Clear	 Exit
 3	 3	 Play	 Play
 4	 4	 Pause	 Pause
 5	 5	 Open/Close	 Eject
 6	 6	 Tuner Band	 TV/R
 7	 7	 Stereo/Auto/mono	 Dual
 8	 8	 Search >>I	 >>I
 9	 9	 I<< Search	 I<<
 10	 0	 Up	 Up
 +10	 Guide	 Down	 Down
 Sleep	 Sleep	 Bass	 Back
 Display	 Info	 Tone	 Media
 Auto Preset	 Subt	 Vol+	 Vol +
 Intro	 Ok	 Vol-	 Vol -
 Repeat	 Text		

