




 

 

 

 

 



 

 



 





 

 

 



 

 

 



 










 
 

 



 









 












Original	Replacement	Original	Replacement
 Power	 Power	 Blue/Picture	 Blue
 Mute	 Mute	 O/I/I	 Dual
 1	 1	 Menu	 Menu
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 OK	 Ok
 7	 7	 [≡]	 Text
 8	 8	 Back	 Back
 9	 9	 P+	 Ch +
 0	 0	 P-	 Ch -
 i	 DISPLAY INFO	 Vol+	 Vol +
 AV	 TIMER AV	 Vol-	 Vol -
 Red/Zoom	 Red	 ^/[+]	 Format
 Green/(↔)	 Green	 Play/[?]	 Play
 Yellow/Timer	 Yellow	 >>/[♦]	 >>





Original	Replacement	Original	Replacement
	~/Timer		Options
	Stop/[X]		Stop
	Pause/[≡i]		Pause
	[■]		Subt
	[←■]		TV/R
	[↕■]		3D
	♪		Shift + Dual




 

 



 






 





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	AV		AV
	i		Info
	O)/I/II		Dual
	[≡]		Text
	P+		Ch +
	P-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Red/Zoom		Red
	Green/(↔)		Green
	Yellow/Timer		Yellow
	Blue/Picture		Blue
	<<		<<
	>>/[♦]		>>
	^[+]		Format
	~/Timer		Options
	Rec/Top Menu		Rec
	Play/[?]		Play
	Stop/[X]		Stop
	Pause/[≡i]		Pause
	[■]		Subt
	[←■]		TV/R




 



 

 



 

 





 

 

















 














 















Original		Replacement		Original	Replacement
	[↕■]		3D		
	♪		Shift + Dual		
	Menu		Menu		
	Back		Back		
	OK		Ok		
	Up		Up		
	Down		Down		
	Right		Right		
	Left		Left		





Original	Replacement	Original	Replacement
 Power	 Power	 Green/(↔)	 Green
 Mute	 Mute	 Yellow/Timer	 Yellow
 1	 1	 Blue/Picture	 Blue
 2	 2	 OK	 Ok
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 P+	 Ch +
 8	 8	 P-	 Ch -
 9	 9	 Vol+	 Vol +
 0	 0	 Vol-	 Vol -
 i	 DISPLAY INFO	 <<	 <<
 AV	 TIMER AV	 Play/[?]	 Play
 O)/I/II	 SOUND DUAL	 >>/[♦]	 >>
 Menu	 TOP MENU MENU	 Stop/[X]	 Stop
 ZOOM	 A	 Pause/[≡i]	 Pause





Original	Replacement	Original	Replacement
	PICTURE FORMAT Format		
	SETTINGS OPT Options		
	AD SUBT Subt		
	SEARCH TV/R TV/R		
	ECO 3D 3D		
	SHIFT + SOUND DUAL Shift + Dual		
	RETURN BACK Back		
	REPEAT TEXT Text		

