
 

 


 
 





 


 
 

 

 
 


 
 




 


 

 
 
 




 
 
 
 

 





Original	Replacement	Original	Replacement
Power	Power	Group/Title Skip >>I	Ch +
Sleep/A.Stby	Sleep	Stop/PTY	Stop
Clock/Timer	AV	Repeat	Text
Scan Mode	Green	Top Menu/PG	Shift + Menu
Display	Info	Menu/PL	Menu
Picture/Adjust	Format	Tuner/Play	3D
Dimmer	Smart	Vol+	Vol +
Play/Pause	Play	Vol-	Vol -
Play/Pause USB	Pause	Fade Muting	Mute
Play/Pause SD	Media	Return	Shift + Pre Ch
Tuner	TV/R	Return	Back
Audio In	Dual	On Screen	Shift + Info
<</Slow-	<<	Set Up	Options
>>/Slow+	>>	Up	Up
I<<	I<<	Down	Down
I<< Group/Title Skip	Ch -	Right	Right
>>I	>>I	Enter/Set	Ok





Original	Replacement	Original	Replacement
 Left	 Left	 9	 9
AUDIO/MPX Audio/MPX	 Red	 0	 0
SUBTITLE Subtitle	 Subt	 10	 Guide
ZOOM Zoom	 Eject	 +10	 Pre Ch
SOUND MODE Sound Mode	 List	 Angle	 Shift + 5
SURROUND Surround	 Shift + Dual	 Time Search	 Shift + 6
C.VOICE C.Voice	 Yellow	 DVD Level	 Shift + 7
S.TURBO II S.Turbo II	 Blue	 Audio In Level	 Shift + 8
HBS HBS	 Shift + Smart	 Repeat A-B	 Shift + Text
 1	 1	 Resume	 D. Menu
 2	 2	 Cancel	 Exit
 3	 3	 File Type	 Shift + Media
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		

