



 






 





Original	Replacement
 Power Audio	 Power
 Tv Direct	 Shift + 0
 Power DVR/DVD	 Red / Netflix / Search
 Power VCR	 Green / APP / Repeat
 Power STB	 Yellow / YouTube / Repeat
 Power Tv	 Blue / Prime Video / Random
 DVR/DVD	 Fav / Marker / PC
 VCR	 Shift + 4
 Video	 Shift + 5
 TV	 Shift + 1
 DVD Multi	 Guide / EPG / -/--
 FM/AM	 Shift + 6
 Tv/Video	 TV/Radio /
 Muting	 Mute / Dimmer
 Vol+	 Vol+
 Vol-	 Vol-
 Channel+	 Shift + Audio / Lang I/II

Original	Replacement
 Channel-	 Shift + Setup / OPT / Tools
 Tv Vol+	 Shift + Vol+
 Tv Vol-	 Shift + Vol-
 I<</Tuning-	 I<< / Preset-
 Play/FM Mode	 Play / Slow
 >>I/Tuning+	 >>I / Preset+
 <<	 << / Tune-
 Stop/Memory	 Stop / Hold
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Menu	 Menu / Home
 Top Menu/STB	 D.Menu / Top
 Smart Surround Setup	 Sound / Title
 On	 Picture / Format
 Up/TA/News/Inf	 Up
 Down/PTY	 Down
 Right/PTY+	 Right





Original	Replacement
Left/PTY-	Left
Enter	OK
fsIRate/Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
SetUp	Setup / OPT /
DVD/HDD/Title/Gr	+  Shift + 2
Zoom/→	Zoom / Size
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0

Original	Replacement
←	Back / Return
VFP/Progressive	Smart / List
Angle	Info / Angle
Ex/Es/Return	+  Shift + Back / Return
Cancel	Exit / Cancel / Clear
DVD Card/Rec	Rec / Rec Mode
Rec Pause	+  Shift + Pause / Step /
Surround	Eject / Surround
Display/Dimmer	Display / Media
Input Analog/Digital	AV / Input / RDS
L-Front+/Thumbn	+  Shift + Up
L-Front-	+  Shift + Down
Front-R+/Slide	+  Shift + Right
Front-R-	+  Shift + Left
Center+/3D/S	CH+ / Page+
Center-	CH- / Page-
Page+/Subwfr+	+  Shift + CH+ / Page+

Page+


 
















 





















 
 


Original	Replacement
 Power DVD	 Power
 Power Audio	 Shift + Power
 Muting	 Mute / Dimmer
 Vol+	 Vol+
 Vol-	 Vol-
 I<<	 I<< / Preset-
 Play	 Play / Slow
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Menu	 Menu / Home
 Top Menu/STB	 D.Menu / Top
 On Screen	 Picture / Format
 Up	 Up
 Down	 Down

Original	Replacement
 Right	 Right
 Left	 Left
 Enter	 OK
 fs/Rate/Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Set Up	 Setup / OPT /
 DVD/HDD/Title/Gr	 Blue / Prime Video / Random
 Zoom/→	 Zoom / Size
 ←	 Back / Return
 VFP/Progressive	 Smart / List
 Angle	 Info / Angle
 EX/Es/Return	 Shift + Back / Return
 Cancel	 Exit / Cancel / Clear
 DVD Card/Rec	 Rec / Rec Mode
 1	 1
 2	 2
 3	 3





Original		Replacement		Original		Replacement	
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	10		Guide / EPG / -/--				
	+10		Fav / Marker / PC				
	Surround		Eject / Surround				
	Display/Dimmer		Display / Media				
	Input Analog/Digital		AV / Input / RDS				
	Thumbnail		Yellow / YouTube / Repeat				
	Slide		Text / Goto				
	3D/S Effect		Sound / Title				
	Page+		CH+ / Page+				







Original	Replacement
Power Audio	Power
FM/AM	TV/Radio /
Muting	Mute / Dimmer
Vol+	Vol+
Vol-	Vol-
I<</Tuning-	I<< / Preset-
Play/FM Mode	Play / Slow
>>I/Tuning+	>>I / Preset+
Stop/Memory	Stop / Hold
Up/TA7News/Inf	Up
Down/PTY	Down
Right/PTY+	Right
Left/PTY-	Left
On	Picture / Format
Smart Surround Setup	Smart / List
1 FM/AM	1
2 FM/AM	2

Original	Replacement
3 FM/AM	3
4 FM/AM	4
5 FM/AM	5
6 FM/AM	6
7 FM/AM	7
8 FM/AM	8
9 FM/AM	9
10 FM/AM	0
+10 FM/AM	Fav / Marker / PC
EX/ES/Return	Back / Return
Display/Dimmer	Display / Media
Decode	Shift + 2
EQ Freq	Shift + 3
Bass Boost	Shift + 4
C.Tone	Shift + 5
EQ Level+	Shift + 6
Midnight	Shift + 7



