 


 
 





 


 
 



 

 

 







 

 

 



 
 











 




 















Original	Replacement	Original	Replacement
Title Del	Shift + 1	TV Channel-	Shift + CH- /
Level Meter	Shift + 2	7	7
Motion Sensor	Shift + 3	8	8
Power Audio	Power	9	9
Display Chara	Shift + 4	Karaoke Setting	Smart / List
Eco Dimmer	Shift + Mute / Dimmer	10	Guide / EPG / -/-
Tv/Video	TV/Radio /	Sleep	Sleep / Timer
Power Tv	Shift + Power	0	0
1	1	A.STBY	Shift + 0
2	2	+10	Fav / Marker / PC
3	3	Clock/Timer	Shift + Sleep / Timer
MIC Vol+	Shift + Up	Mic Mix	Shift + Smart / List
TV Channel+	Shift + CH+ /	Karaoke Scoring	Shift + AV / Input / RDS
4	4	Reserve	Shift + Green / APP /
5	5	Vocal Masking	Shift + Red / Netflix /
6	6	Vocal Support	Shift + Subtitle / EQ
MIC Vol-	Shift + Down	Top Menu/PG	D.Menu / Top

 





 







 





 

 

 


 






Original	Replacement	Original	Replacement
 Menu/PL	 Menu / Home	 Back/Tuner/Play Mode	 Back / Return
 Cancel	 Exit / Cancel / Clear	 Return	 Shift + Back / Return
 Audio Vol+	 Vol+	 I<<	 I<< / Preset-
 Tv Vol+	 Shift + Right	 I<< Group Title Skip	 Shift + I<< / Preset-
 Up	 Up	 >>I	 >>I / Preset+
 Left	 Left	 Group Title Skip >>I	 Shift + >>I / Preset+
 Enter/Set	 OK	 <<	 << / Tune-
 Right	 Right	 >>	 >> / Tune+
 Down	 Down	 Group Title >>	 Shift + >> /
 Audio Vol-	 Vol-	 Play/Pause	 Red / Netflix / Search
 Tv Vol-	 Shift + Left	 Play/Pause USB	 Shift + Play /
 On Screen	 Display / Media	 FM Tuner	 Shift + 6
 Set Up	 Setup / OPT /	 Tuner AM	 Blue / Prime Video / Random
 Fade Muting	 Mute / Dimmer	 Audio/MPX	 Audio / Lang I/II
 Stop	 Stop / Hold	 Subtitle	 Subtitle / EQ
 Play	 Play / Slow	 Zoom	 Zoom / Size
 Pause	 Pause / Step / Freeze	 Angle	 Info / Angle





	Original	Replacement	Original	Replacement
	Audio In	 + 		Shift + Display / Media
	File Type			Text / Goto
	Repeat			Green / APP / Repeat
	Repeat A-B			Yellow / YouTube / Repeat
	VFP/Scan Mode			AV / Input / RDS
	3D Phonic/HP	 + 		Shift + Zoom /
	C.Voice	 + 		Shift + Setup / OPT / Tools
	DVD Audio In	 + 		Shift + Audio / Lang I/II
	Sound Mode			Sound / Title
	Subwoofer Level+			CH+ / Page+
	My Sound			Picture / Format
	V.Bass	 + 		Shift + Sound / Title
	Subwoofer Level-			CH- / Page-

