



Original	Replacement
 Power Audio	 Power
 Power Tv	 Shift + Power
 1	 1
 2	 2
 3	 3
 5	 5
 4	 4
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10	 Guide / EPG / -/-
 +10	 Fav / Marker / PC
 Audio Vol+	 Vol+
 Audio Vol-	 Vol-
 Fade Muting	 Mute / Dimmer

Original	Replacement
 Menu/PL	 Menu / Home
 Top Menu/PG	 D.Menu / Top
 On Screen	 Display / Media
 Play	 Play / Slow
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Back/Tuner/Play Mode	 Back / Return
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+
 Play/Pause	 Red / Netflix / Search
 Play/Pause USB	 Shift + Play /
 Play/Pause	 Shift + Yellow / YouTube /
 Play/Pause Bluetooth	 Blue / Prime Video / Random
 Audio/MPX	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ





Original	Replacement
Zoom	Zoom / Size
Audio In	Shift + Display / Media
File Type	Text / Goto
Repeat	Green / APP / Repeat
VFP/Scan Mode	AV / Input / RDS
3D Phonic/HP	TV/Radio /
C.Voice	Shift + Setup / OPT / Tools
DVD Audio In	Shift + Sound / Title
My Sound	Picture / Format
Sound Mode	Sound / Title
Subwoofer Level+	CH+ / Page+
V.Bass	Shift + Audio / Lang I/II
Subwoofer Level-	CH- / Page-
Repeat A-B	Yellow / YouTube / Repeat
Cancel	Exit / Cancel / Clear
Set Up	Setup / OPT /
Return	Shift + Back / Return

Original	Replacement
Angle	Info / Angle
Tv Vol+	Shift + Right
Tv Vol-	Shift + Left
Enter/Set	OK
Up	Up
Down	Down
Right	Right
Left	Left
Sleep	Sleep / Timer
A.STBY	Shift + 0
Clock/Timer	Shift + Sleep / Timer
MIC Vol+	Shift + Up
MIC Vol-	Shift + Down
Karaoke Setting	Smart / List
Mic Mix	Shift + Smart / List
TV Channel+	Shift + CH+ /
Vocal Masking	Eject / Surround





Original	Replacement	Original	Replacement
TV Channel-	SHIFT + CH PAGE		
Karaoke Scoring	SHIFT + RDS AV INPUT		
Reserve	SHIFT + SIZE ZOOM		
Title/Edit/Bluetooth Setting	SHIFT + TV 1		
Level Meter	SHIFT + DVD 2		
Motion Sensor	SHIFT + CD-STB 3		
Vocal Support	SHIFT + EQ SUBTITLE		
Display/Character	SHIFT + VIDEO 4		
Eco Dimmer	SHIFT + TAPE 5		
Tv/Video	SHIFT + TUNER 6		
Group Title >>	SHIFT + BLUETOOTH 9		
Group Title Skip >>	SHIFT + USB 8		
I<< Group Title Skip	SHIFT + AUX-HDD 7		
Rec Mode	REC MODE		
Title Search	SHIFT + OK		

Original	Replacement

