
 
 




Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	Tv/AV		AV / Input / RDS		Zoom		Zoom / Size
	1		1		P-		CH- / Page-
	2		2		Up		Up
	3		3		Left		Left
	4		4		OK/Select		OK
	5		5		Right		Right
	6		6		Menu		Menu / Home
	7		7		Down		Down
	8		8		Mute		Mute / Dimmer
	9		9		Red / Picture		Red / Netflix / Search
	-/--		Shift + Guide / EPG / -/--		Red / Picture		Picture / Format
	0		0		Green / Sound		Green / APP / Repeat
	Back		Back / Return		Green / Sound		Sound / Title
	Vol+		Vol+		Yellow / Sleep		Yellow / YouTube / Repeat
	Scan		Smart / List		Yellow / Sleep		Sleep / Timer
	P+		CH+ / Page+		Blue / Call		Blue / Prime Video / Random





Original		Replacement		Original		Replacement	
	Text		Text / Goto				
	Mix		Shift + Text /				
	Size		Shift + Zoom /				
	Index		Rec / Rec Mode				
	Hold		Stop / Hold				
	Reveal		Play / Slow				
	Subpage		Subtitle / EQ				
	Cancel		Exit / Cancel / Clear				
	DVB Menu		D.Menu / Top				
	i		Info / Angle				
	EPG		Guide / EPG / -/--				
	ESC		Fav / Marker / PC				
	DVB		Display / Media				
	Freeze		Pause / Step / Freeze				
	I/II		Audio / Lang I/II				

