




| Original | Replacement |
|--|---|
|  Tuner |  Shift + 6 |
|  Sleep |  Sleep / Timer |
|  Power Receiver |  Power |
|  Video |  Shift + 4 |
|  DVD |  Shift + 2 |
|  AUX |  Shift + 7 |
|  Game/F.AUX |  Smart / List |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  Input Mode |  AV / Input / RDS |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  Setup |  Setup / OPT / |
|  7 |  7 |
|  8 |  8 |

| Original | Replacement |
|--|---|
|  9 |  9 |
|  Tone |  Shift + Audio / Lang I/II |
|  +10 |  Guide / EPG / -/- |
|  0 |  0 |
|  Dimmer |  Shift + Mute / Dimmer |
|  Sound |  Sound / Title |
|  Listen Mode |  Display / Media |
|  Active EQ |  Shift + Display / Media |
|  Multi Control |  Down |
|  Multi Control Up |  Up |
|  Vol+ |  Vol+ |
|  Vol- |  Vol- |
|  Play/Pause/Ban |  Play / Slow |
|  Stop/Auto/Mono |  Stop / Hold |
|  Mute |  Mute / Dimmer |
|  I<< P.Call |  I<< / Preset- |
|  P.Call >>I |  >>I / Preset+ |





| Original | Replacement |
|--|---|
|  Power DVD |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  Setup |  Setup / OPT / |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  +10 |  Guide / EPG / -/- |
|  0 |  0 |
|  Dimmer |  Mute / Dimmer |
|  Top Menu |  D.Menu / Top |
|  Up |  Up |
|  Menu |  Menu / Home |

| Original | Replacement |
|--|---|
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Down |  Down |
|  Return |  Back / Return |
|  On Screen |  Display / Media |
|  Pause |  Pause / Step / Freeze |
|  Play/Pause |  Play / Slow |
|  Stop |  Stop / Hold |
|  I<< |  I<< / Preset- |
|  >>I |  >>I / Preset+ |
|  << |  << / Tune- |
|  >> |  >> / Tune+ |
|  RDS Disp./Disc |  AV / Input / RDS |
|  PTY Disc Skip |  Shift + D.Menu / Top Menu |
|  Audio |  Audio / Lang I/II |
|  Subtitle |  Subtitle / EQ |



