




 

 
 
 
 
 
 
 
 
 
 
 
 
 
 


 
 


 
 



 


 


 

 
 
 





 

 




 


 


 
 









Original		Replacement		Original		Replacement	
	Standby		Power		+10/PTY Search		Guide
	SRS 3D		Menu		O.T.E.		Rec
	Ex.Bass		Exit		P.Mode		Format
	N.B.		Info		Edit		Smart
	Sleep		Sleep		Random		D. Menu
	Input		AV		Repeat		Text
	Disc Skip		List		RDS Display		Red
	1		1		TA News/Info		Green
	2		2		PTY		Yellow
	3		3		Band		Blue
	4		4		<< Tuning		<<
	5		5		Tuning >>		>>
	6		6		I<</P.Call		I<<
	7		7		>>I/P.Call		>>I
	8		8		A/B		TV/R
	9		9		<> Tape		Right
	0		0		<> Tape		Left





Original		Replacement		Original		Replacement	
	Stop CD		Stop				
	Play/Pause CD		Play				
	Play/Pause CD		Pause				
	EQ		Options				
	Mute		Mute				
	Vol-		Vol -				
	Vol+		Vol +				

