
 
 
 


 

 
 

 
 








Original	Replacement	Original	Replacement
	Power		Power
	Exit		Exit
	Display		Shift + Info
	TV/AV		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Pre Ch
	Back		Back
	-/--		Shift + Guide
	[≡?]		Smart
	[≡⇅]		Eject
	[ /≡]		Shift + Text
	[≡□]		Stop
	[≡●]		Media
	[≡i]		List
	[≡]		Text
	Menu 1		D. Menu
	Exit 1		Shift + Exit
	Info		Info
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Pause		Pause
	PGUP		Shift + Ch +





Original	Replacement
PGDN	Shift + Ch -
TV / Audio	TV/R
Audio Setting	Options
Text 1	Shift + Subt
EPG	Guide
Subtitle	Subt
9 Picture	Shift + 9
Sleep	Sleep
I/II	Dual
Mute	Mute
Red / Enter	Red
Green / P.Mode	Green
Green / P.Mode	Format
Yellow / ANA	Yellow
Blue / S.Mode	Blue
Blue / S.Mode	Shift + Dual
Up / P+	Ch +

Original	Replacement
Up / P+	Shift + Up
Down / P-	Ch -
Down / P-	Shift + Down
Right / V+	Vol +
Right / V+	Shift + Right
Left / V-	Vol -
Left / V-	Shift + Left
Menu	Menu
Menu	Shift + Ok

