
 



 


 


 




Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv/Radio		TV/R
	←PR		Back
	EPG		Guide
	Menu		Menu
	Info		Info
	Exit		Exit
	Up/PR+		Up
	Down/PR-		Down
	OK/List		Ok
	Right		Right
	Left		Left
	Vol+		Vol +
	Vol-		Vol -
	↑		Ch +
	↓		Ch -
	Pause		Pause
	[+]		3D
	FAV		Pre Ch
	UHF		Smart
	PAL/NTSC		Format
	TV/AV		AV
	Red		Red





Original	Replacement	Original	Replacement
 TXT	Green	 B	Green
 Yellow	Yellow	 C	Yellow
 Blue	Blue	 D	Blue
 AUDIO	Audio	 SOUND DUAL	Dual
 TXT	TXT	 REPEAT TEXT	Text
 [...]	[...]	 AD SUBT	Subt
 Audio L/R	Audio L/R	 SHIFT +  SOUND DUAL	Shift + Dual

Original	Replacement	Original	Replacement

