



























 

































 

 


 




















 

 


Original	Replacement
	 Power
	 Mute / Dimmer
	 TV/Radio /
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 AV / Input / RDS
	 Fav / Marker / PC
	 Up
	 CH+ / Page+

Original	Replacement
	 CH- / Page-
	 Down
	 Right
	 Vol+
	 Left
	 Vol-
	 OK
	 Menu / Home
	 Zoom / Size
	 Audio / Lang I/II
	 Info / Angle
	 Sleep / Timer
	 Back / Return
	 Picture / Format
	 Shift + Sleep / Timer
	 Sound / Title
	 Red / Netflix / Search





Original	Replacement
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Display / Media
	 Stop / Hold
	 Shift + Zoom /
	 Text / Goto
	 Subtitle / EQ
	 Shift + Text /
	 D.Menu / Top
	 Exit / Cancel / Clear
	 Shift + Back / Return

Original	Replacement

