




 

 









 







 







 




 
 



Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 ECO	 Display / Media
 0	 0
 EPG	 Guide / EPG / -/--
 Vol+	 Vol+
 CH+	 CH+ / Page+
 Vol-	 Vol-

Original	Replacement
 Smart Key	 Shift + Smart / List
 CH-	 CH- / Page-
 Info	 Info / Angle
 Source	 AV / Input / RDS
 Return	 Back / Return
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Left / Zoom-	 Left
 OK	 OK
 Right / Zoom+	 Right
 Rec	 Rec / Rec Mode
 Down	 Down
 TimeShift	 Sleep / Timer
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 List	 Smart / List





Original	Replacement
 Fav	 Fav / Marker / PC
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue / Lang	 Shift + Blue / Prime
 Blue / Lang	 Blue / Prime Video / Random

Original	Replacement

