 
 
 


 
 




 
 

 

 
 

 
 
 
 
 




Original	Replacement
 POWER	 Power
 INFO	 Info / Angle
 HDMI CONTROL	 Smart / List
 SLEEP	 Sleep / Timer
 SCREEN	 Picture / Format
 SOURCE	 AV / Input / RDS
 PRESETS	 Setup / OPT /
 1	 1
 2	 2
 3	 3
 ZOOM/RED/▲	 Zoom / Size
 ZOOM/RED/▲	 Shift + CH+ /
 ZOOM/RED/▲	 Red / Netflix / Search
 4	 4
 5	 5
 6	 6
 REPEAT/GREEN/▼	 Shift + CH- / Page-

Page-

Original	Replacement
 REPEAT/GREEN/▼	 Green / APP / Repeat
 7	 7
 8	 8
 9	 9
 ROOT/YELLOW	 Yellow / YouTube / Repeat
 RETURN	 Back / Return
 0	 0
 MENU	 Menu / Home
 TITLE/BUE	 Sound / Title
 TITLE/BUE	 Blue / Prime Video / Random
 UP	 Up
 LEFT	 Left
 OK/SELECT	 OK
 RIGHT	 Right
 DOWN	 Down
 P+	 CH+ / Page+
 P-	 CH- / Page-





Original		Replacement		Original		Replacement	
	V-		Vol-		PAUSE		Pause / Step / Freeze
	V+		Vol+		<<		<< / Tune-
	FAV		Fav / Marker / PC		>>		>> / Tune+
	LANG		Audio / Lang I/II		I<<		I<< / Preset-
	SUBTITLE		Subtitle / EQ		>>I		>>I / Preset+
	MUTE		Mute / Dimmer				
	SWAP/↔		Shift + Back / Return				
	EPG		Guide / EPG / -/--				
	[*] / [··]		D.Menu / Top				
	TEXT		Text / Goto				
	C		Exit / Cancel / Clear				
	DISPLAY		Display / Media				
	ANGLE		Shift + Info / Angle				
	SEARCH MODE		Shift + Red / Netflix /				
	REC		Rec / Rec Mode				
	STOP		Stop / Hold				
	PLAY		Play / Slow				

