 

 

 

 

 
 
 

 

 








 

 
 

 
 
 

 

 
 
 

 



 
 


 

 
 

 




 

 

 

 

 

 

 

 


 
 

 
 
 
 
 

 






Original	Replacement	Original	Replacement
	Power		Power
	DVD		Guide
	VCR		Shift + Guide
	Eject/Open/Close		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Av Input		AV
	<</Backward		<<
	>>/Forward		>>
	I<< Skip		I<<
	Pause/Step		Pause
	>>I Skip		>>I
	Play		Play
	Stop		Stop
	Home		Smart
	Disc Menu List		Menu
	PR/CH Up/TRK+		Up
	PR/CH		Down
	Right		Right
	Left		Left
	Enter		Ok
	Display		Info
	Return		Back
	O)/Audio		Dual
	[...]/Subtitle		Subt





Original	Replacement	
ZOOM	Zoom	 Shift + Eject
I.SKIP	I.Skip	 Text
REC	Rec	 Rec
REC MODE	Rec Mode	 Shift + Rec
DUBBING	Dubbing	 Format
TITLE	Title	 Options
MARKER --	Marker	 List
PLAY MODE	Play Mode	 Shift + Play
SEARCH	- Search	 Eject
THUMBNAIL	Thumbnail	 Sleep
CHP.ADD	CHP.ADD	 D. Menu
TV/VCR	Tv/VCR	 TV/R
TIMESHIFT	Timeshift	 3D
TV POWER	Power Tv	 Shift + Power
*	*	 Shift + AV
AV/INPUT	AV Input Tv	 Media
PR/CH	PR/CH + Tv	 Ch +

Original	Replacement
PR/CH - Tv	Ch -
Vol+ Tv	Vol +
Vol- Tv	Vol -

