


 

 

 


 


 

 
 

 

 
 

 

 


 
 

 
 



 


 




Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol+
 TV/RAD	 TV/ Radio /	 Mute	 Mute / Dimmer
 Input	 AV / Input / RDS	 PR+/Page Up	 CH+ / Page+
 AV Mode	 Picture / Format	 Vol-	 Vol-
 Energy Saving	 Eject / Surround	 PR-/Page Down	 CH- / Page-
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Menu	 Menu / Home
 6	 6	 Down	 Down
 7	 7	 Return	 Back / Return
 8	 8	 Red	 Red / Netflix / Search
 9	 9	 Green/Stop	 Green / APP / Repeat
 List	 Smart / List	 Green/Stop	 Stop / Hold
 0	 0	 Yellow/Play	 Yellow / YouTube / Repeat
 Q.View	 Display / Media	 Yellow/Play	 Play / Slow

Original	Replacement	Original	Replacement
 DIMMER MUTE	 SHIFT	 TV	 DVD
 SLOW	 STEP-FREEZE	 SAT	 AUX
 HOLD	 REC MODE	 TV	 DVD
 TUNE-	 TUNE+	 SAT	 AUX
 PRESET-	 PRESET+	 TV	 DVD
 TITLE	 LANG UII	 SAT	 AUX
 SOUND	 AUDIO	 TV	 DVD
 PICTURE	 ZOOM	 SAT	 AUX
 TOP MENU	 OPT-TOOLS	 TV	 DVD
 D.MENU	 SETUP	 SAT	 AUX
 HOME	 ANGLE	 TV	 DVD
 MENU	 INFO	 SAT	 AUX
 OK	 OK	 TV	 DVD
 EXIT	 BACK	 SAT	 AUX
 CANCEL	 LIST	TV	DVD
VOL+	SMART	SAT	AUX
VOL-	MEDIA	TV	DVD
TV	DISPLAY	SAT	AUX
DVD	CH PAGE	TV	DVD
CD - STB	CD - STB	SAT	AUX
VIDEO	TAPE	TV	DVD
VIDEO	TUNER	SAT	AUX
VIDEO	AUX - HDD	TV	DVD
VIDEO	USB	SAT	AUX
VIDEO	BLUETOOTH	TV	DVD
VIDEO	USB	SAT	AUX
VIDEO	HDMI - BAT	TV	DVD
VIDEO	FC	SAT	AUX
VIDEO	FAV MARKER	TV	DVD
GUIDE EPG	GUIDE EPG	SAT	AUX
NETFLIX	APP	TV	DVD
APP	YouTube	SAT	AUX
YouTube	Prime Video	TV	DVD
SEARCH	REPEAT	SAT	AUX
REPEAT	REPEAT A-B	TV	DVD
REPEAT A-B	RANDOM	SAT	AUX
RANDOM	RANDOM	TV	DVD





Original	Replacement	Original	Replacement
	Blue/Prime Video / Random		
	Pause / Step / Freeze		
	Text / Goto		
	Left / Preset-		
	Setup / OPT /		
	Left / Tune-		
	Right / Preset+		
	Subtitle / EQ		
	Right / Tune+		
	Sleep / Timer		
	D.Menu / Top		
	Info / Angle		
	Guide / EPG / -/--		
	Fav / Marker / PC		

Original	Replacement	Original	Replacement

